

SmartBaffle wind blocker

Use a utility knife and cut down the 2" flange along the same channel. Then bend down and bring flanges in.


Flange

SmartBaffle

Bend down wind blocker notch and install as shown- no nails required.

Simply use a utility knife to cut the two side flanges at the desired bend length and bend down SmartBaffle. Bring 2" flanges on the bended side toward the attic for easy installation. Easily cuts around rafter tails if stick built home. Much easier to use, cut and handle than any other baffle on the market plus a full 2" of deck clearance.

Cut 2"

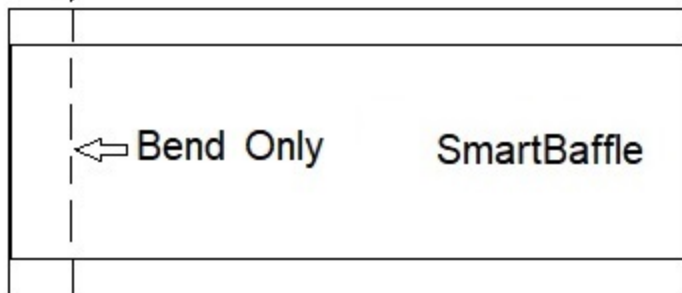

↑ Cut 2"

Remove existing insulation during baffle installation and re-install at completion. Ensure nothing is blocking the soffit air flow as part of the installation.

Smartbaffle by DCI Products
610-622-4455

www.dciproducts.com