

StarterBaffle[™]by DCI

Instructions for use with rafters 16" and 24" on center

It is important to follow each step within these instructions for proper installation of the StartBaffleTM product. Any deviation from these instructions will void any warranty written or implied by DCI Products. If you need assistance with product installation, call DCI Products Monday through Friday 8am- 5 pm est. Our number is 610-622-4455 or contact us via email info@dciproducts.com

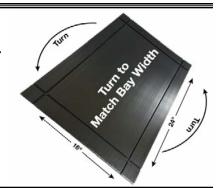


StarterBaffle 2N1 Directions

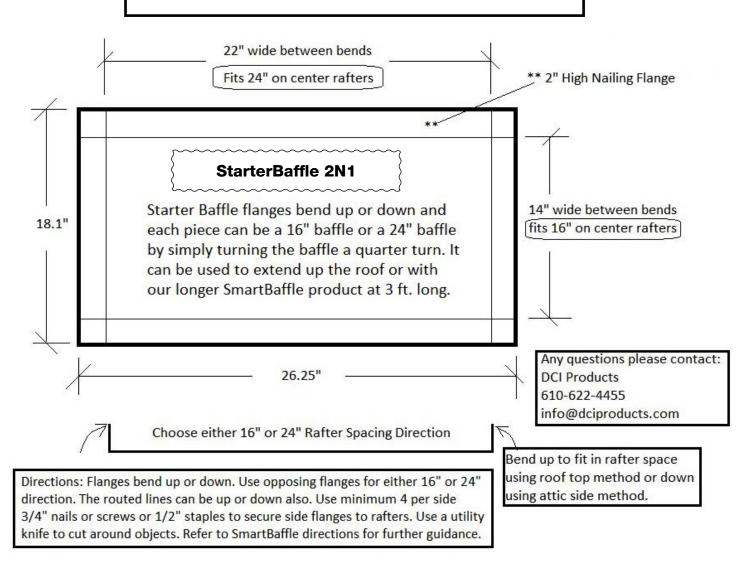


StarterBaffle[™]by DCI

Instructions for use with rafters 16" and 24" on center

It is important to follow each step within these instructions for proper installation of the StartBaffleTM product. Any deviation from these instructions will void any warranty written or implied by DCI Products. If you need assistance with product installation, call DCI Products Monday through Friday 8am- 5 pm est. Our number is 610-622-4455 or contact us via email info@dciproducts.com

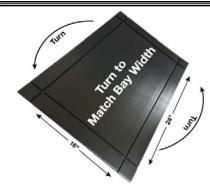

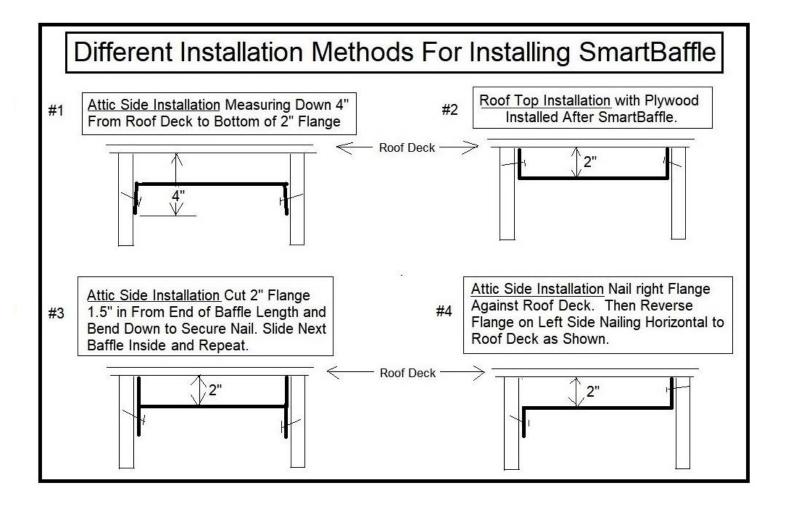

Use 1/2" staples or 1" screws or 1.25" roofing nails to attach Baffles to side wood rafters. Cuts can easily be made with a retractable type utility knife. Bends can be made by cutting halfway through plastic on the side opposite the bend direction of choice.