


## Multicap™ Vent Cap Sizing Guide For Use With Gas Vent Pipe As Shown

Product #	Model #	To fit pipe with outside diameter
81694	VC35	2-7/8" to 4-7/8"
81695	VC57	4-7/8" to 6-7/8"
81696	VC79	6-7/8" to 8-7/8"
81697	VC911	8-7/8" to 10-7/8"
81698	VC1214	11-7/8" to 14"

Roof pitch	Minimum height from roof to lowest discharge opening
Flat to 7/12	1.0 ft
Over 7/12 to 8/12	1.5 ft
Over 8/12 to 9/12	2.0 ft
Over 9/12 to 10/12	2.5 ft
Over 10/12 to 11/12	3.25 ft
Over 11/12 to 12/12	4.0 ft
Over 12/12 to 14/12	5.0 ft
Over 14/12 to 16/12	6.0 ft
Over 16/12 to 18/12	7.0 ft
Over 18/12 to 20/12	7.5 ft
Over 20/12 to 21/12	8.0 ft

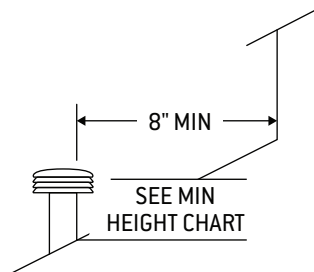

Note: Vents larger than 12" must exhaust a minimum of 12" higher than any part of the roof within 10'

Be sure top of vent pipe does not extend past the collar of the MultiCap vent when installed. Tabs inside of cap will prevent this from happening when installed correctly. Tighten the collar bolts equally to a snug fit.

**Always wear gloves when handling aluminum and sheet metal products.**

Always check Local Building Codes for installation.

**Warning: If the top of the MultiCap vent is too close to the top of the vent pipe, gases WILL NOT vent properly.**

**Complies with ANSI / UL 441**

